



Thermostat for heating or cooling only



Thermostat for cooling and heating



Thermostat for automatic switch between heating and cooling mode

THERMOSTATS

Function

The Dantherm remote thermostats are designed for rough handling and wet environment to work safe under all conditions. They will normally be placed inside the tent to control the Dantherm warm air heater or air conditioner which is placed outside.

There are three different types of remote thermostats for Dantherm mobile heaters and air conditioners.

Thermostat for heating or cooling only

The first is used for heating or cooling only, like the warm air heaters VA-M15MKII and VA-M40MKII and the air conditioner AC-M7MKII without electrical heating.

Thermostat for cooling and heating

The second is used for Dantherm air conditioners with electric heating, like the air conditioner AC-M7MKII (special version with heat) and AC-M18. This thermostat contains an extra switch which is used to set the unit in cooling or heating mode without leaving the tent.

Thermostat for automatically switch between heating and cooling mode

The third thermostat in the product line is a more compact version and has a built in thermostat that automatically handles both heating and cooling mode without manual switch between the two modes.

This thermostat can be used for all products prepared for a remote room thermostat. These are products like AC-M18, AC-M18 CBRN, AC-M7MKII, AC-M11, VA-M15MKII and VA-M40MKII.

FEATURES

- Water and dust tight enclosure (IP 66).
- Adjustable differential.
- 15 m connection cable.
- CE marked.